

## 100% SUBMITTAL

**GENERAL NOTES** 

○ PLAN NOTES

EXISTING BOILER TO REMAIN.

2 EXISTING PIPING TO REMAIN.

3 EXISTING BREECHING TO REMAIN.

4 NATURAL GAS SUPPLY PIPING TO BURNERS BELOW.

6 COMBUSTION AIR INTAKE DUCTWORK FROM ABOVE AND DOWN TO BELOW.

8 EXISTING ROOF HATCH ABOVE. INSIDE DIMENSIONS OF ROOF OPENING ARE 93.5" X 63.75". UTILIZE HATCH FOR REMOVAL OF EXISTING STACK ECONOMIZER AND INSTALLATION OF NEW STACK ECONOMIZER. EXPECTED CLEARANCES BETWEEN ECONOMIZER AND OPENING ARE VERY TIGHT. TAKE SPECIAL CARE IN REMOVAL AND INSTALLATION OF EQUIPMENT.

9 REMOVE STRUCTURAL MEMBERS, HANDRAILS, ETC. AS REQUIRED TO REMOVE AND INSTALL EQUIPMENT. COORDINATE ALL REMOVAL OF BUILDING ITEMS WITH C.O.R.

10 REMOVE EXISTING PIPING BACK TO THIS POINT FOR RECONNECTION IN NEW WORK.

12 REMOVE EXISTING FLUE-GAS OUTLET TEMPERATURE SENSOR FOR RE-INSTALLATION IN NEW WORK.

16 REMOVE WINDOW TO ALLOW INSTALLATION OF TEMPORARY BREECHING. STORE WINDOW

13 REMOVE EXISTING STACK ECONOMIZER AND ALL ASSOCIATED HANGERS, WIRING,

11 DISCONNECT ELECTRICAL/CONTROL CONNECTIONS TO BYPASS ACTUATOR.

5 BOILER FEEDWATER PIPING FROM BELOW.

7 EXISTING BOILER ID FAN TO REMAIN.

CONTROLS, ETC.

14 REMOVE EXISTING BREECHING TO THIS POINT.

15 EXISTING FLUE-GAS INLET TEMPERATURE SENSOR TO REMAIN.

17 REMOVE EXISTING MOTOR FOR REPLACEMENT IN NEW WORK.

19 PROVIDE NEW 6" FEEDWATER BYPASS GLOBE VALVES.

IN A SAFE LOCATION. COORDINATE EXACT LOCATION WITH C.O.R.

18 PROVIDE NEW 4" ECONOMIZER SUPPLY AND RETURN GATE VALVES.

A REFER TO 147-M001 FOR LEGEND, ABBREVIATIONS, AND ADDITIONAL GENERAL NOTES.

B COORDINATE ALL BOILER SHUTDOWNS CLOSELY WITH THE C.O.R. TEMPORARY BREECHING REQUIRED TO ALLOW REMOVAL OF EXISTING STACK ECONOMIZER DURING BOILER OPERATION. COORDINATE CHANGEOVER DATE/TIME AND ANTICIPATED DOWN

TIME WELL IN ADVANCE. ALL COMPLETE PLANT SHUTDOWNS SHALL TAKE PLACE DURING THE ANNUAL THREE DAY SUMMER BOILER PLANT SHUTDOWN.

